How to update Lonsdor K518ISE Hibernation Function?

Updated Device: Lonsdor K518

Updated Condition: for all K518 devices with working normally

Updated Content: Added Hibernation function; Kernel update supported

Updated Version: K518 APK V1.5.25


Preparation for Update:


1. Power on the device or keep the battery level over 80%.

2. Make sure wifi network is in good condition and the device receives signal normally;

Update steps:

1. Click [One key update] and skip to below interface. Then click the first button to update system. When the update complete, click [OK] to reboot the device.

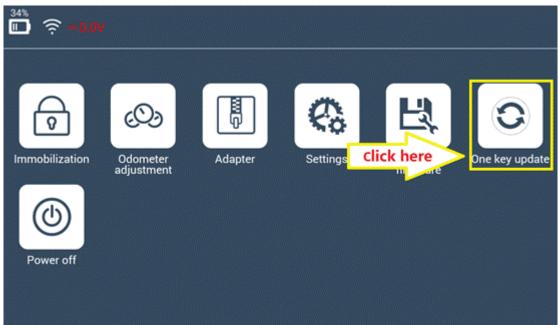


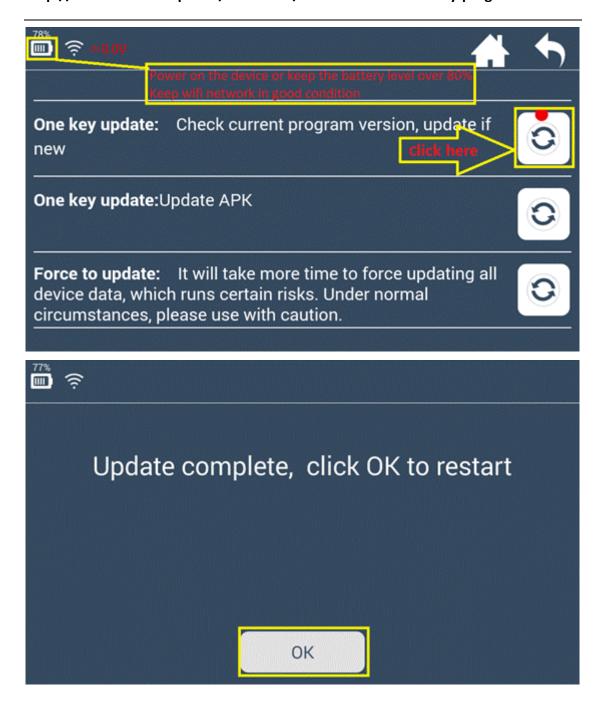


2. After rebooting, click and enter [Settings] menu, you will find there are two additional function buttons: [Update Kernel] and [Display Settings].




3. Click [Update Kernel] first and skip to below interface, then press [Update] to update the kernel.

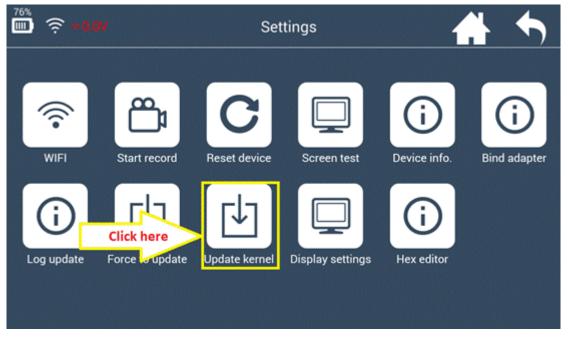

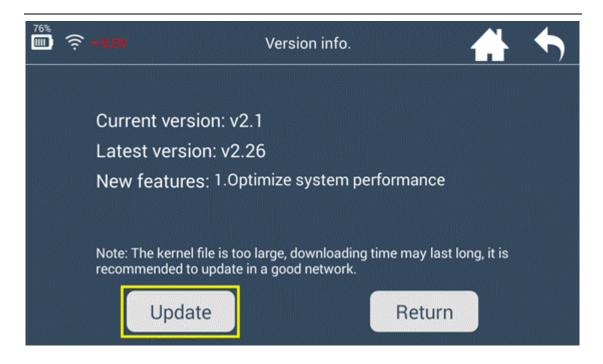


4. Click [Install] after updating the kernel file. And the device will reboot to install kernel.

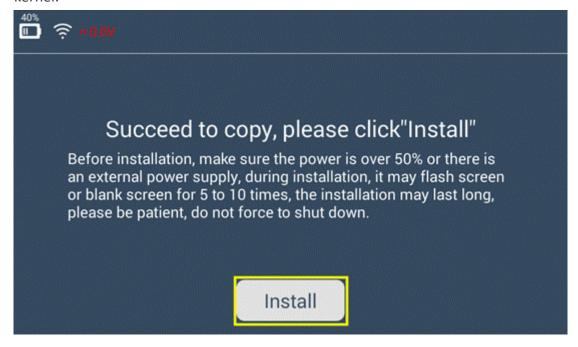


5. Blank screen is normal during the installation. The whole process will take 5 minutes, be patient to wait and don't restart the device manually.


http://www.obd2eshop.com/wholesale/lonsdor-k518ise-car-key-programmer.html

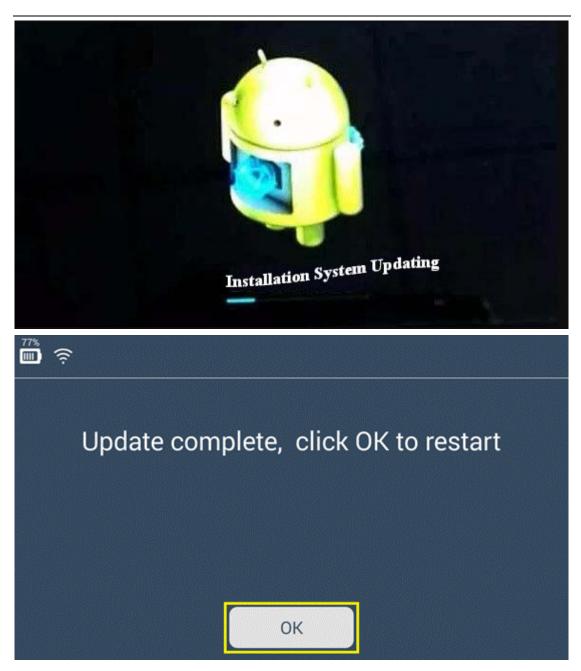

6. The update complete when the password input interface appears. Screen auto-lock in the [Display Settings] is added.

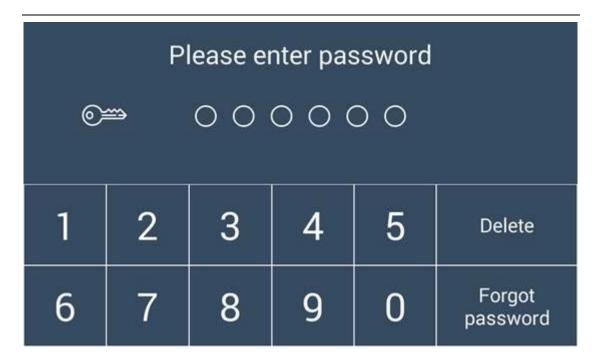

7. Enter [Settings] → [Display Settings] to adjust the screen brightness and screen auto-locking time .

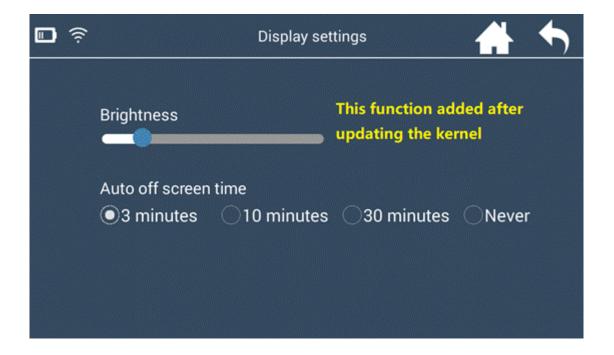

8. The benefits for update: Save power to prolong stand-by time. Auto standby function can prevent the device from being overheated in hot summer.