


How to View Fetrotech Tool Wiring Diagrams

1. Users with PCMtuner devices can search it in the PCMtuner app, take audi edc16u1 as an example, and follow the steps below:

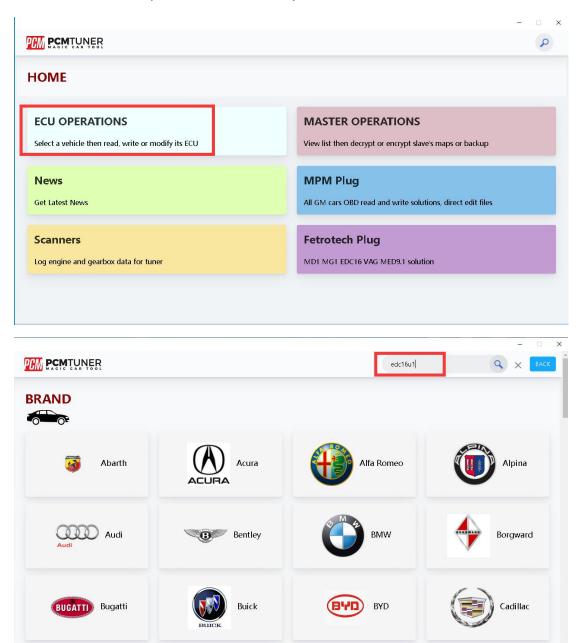

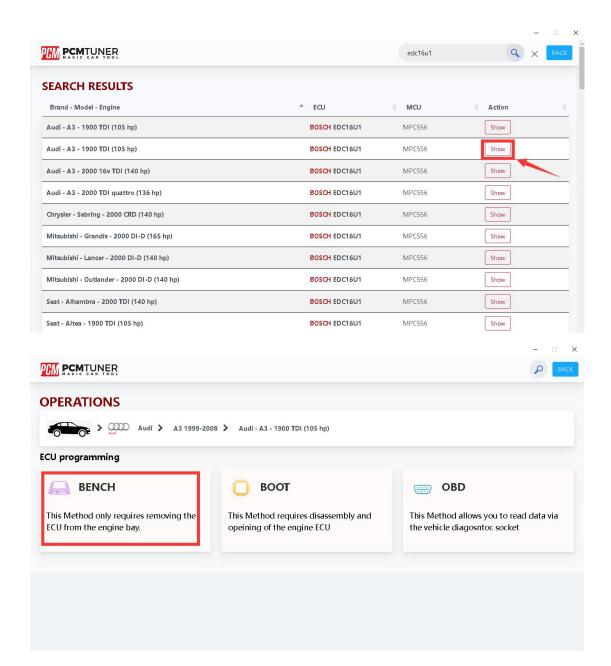

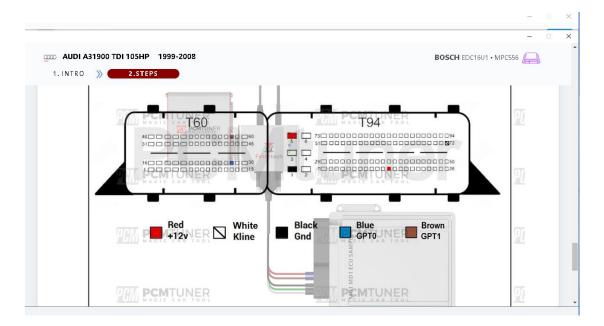

2. To purchase a separate black version of Fetrotech tool, you can log into the official website (www.tuner-box.com), and click "Fetrotech pinout" under the "Download" category, and then enter your email and phone number to view the wiring diagrams as shown below.





CONTENTS

ASTONMARTIN_ME17.8.31	1
ASTONMARTIN_MED17.8.3	2
BMW_EDC16C1	3
BMW_EDC16C31	4
BMW_EDC16C35	5
BMW_EDC17C06	6
BMW_EDC17C41	7
	8
	9
BMW_EDC17C	10
BMW_EDC17C	11
BMW_EDC17CP09	12
BMW_EDC17CP45	13
BMW_EDC17CP49	14
BMW_ME17.2.4	15
BMW_ME17.2	16
BMW_MEVD17.2.3	17
BMW_MEVD17.2.4	18
BMW_MEVD17.2.5	19
BMW_MEVD17.2.6	20
BMW_MEVD17.2.8	21

